



**COZY NIGHT
SHERPA FLEECE
HEATED THROW**

Super Fast Heat Up • Luxurious Comfort

CZN283474 • GREY SAND

CZN283475 • PLEIN AIR

CZN283476 • GREY LILAC

CZN283477 • BLACK ONYX

CZN283478 • PASTEL GREEN

www.glamhaus.co.uk

INTRODUCTION

General Information

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems please contact our Customer Services on **0800 091 3171**.

Contents

- 2. Introduction
- 2. Safety instructions
- 5. Before First Use/Positioning the Throw
- 6. Operation Instructions
- 7. Cleaning and Maintenance
- 7. Technical Data
- 8. Environmental Responsibilities
- 8. Warranty

Safety Instructions

Please read this instruction manual carefully before use and keep in a safe place for future reference. If you give the appliance to another person supply them with the instruction manual.



Intended use

This appliance is intended for use as a Heated Electric Throw. Use it for domestic purposes and in the way indicated in this instruction manual. The appliance is designed for private use. The appliance is not suited for commercial use, medical clinic use or pets.



Caution! Do not operate any appliance if:

- Power cord is damaged.
- After unpacking, ensure that the item is intact with no visible signs of damage that could be caused during delivery. If damaged contact our Customer Services number shown on page 2.
- In case of malfunction or if it has been dropped or damaged in any manner.
- Should the cable be damaged, it must be replaced by a competent qualified electrician.



Caution! An electric appliance is no toy!

- Never leave the appliance unsupervised when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- NOT to be used by young children (0-3 years). Children under the age of three are not to use this appliance due to their inability to react to overheating.
- Explain to your children all risks which can be caused by electric current.
- Do not use it on persons insensitive to heat, helpless persons, infants or children without supervision. Do not use to warm animals.



Caution!

- Do not leave packaging components (plastic bags, cardboard, polystyrene, etc.) within easy reach of children, danger of suffocation!



- Always check that the power supply corresponds to the voltage on the rating plate.

Unplug the appliance

1. Before removing or changing accessories.
2. Before cleaning accessories or the appliance.
3. When malfunctioning during use.
4. To unplug pull the plug, never pull on the power cable to avoid damage.
5. Never move the appliance by pulling the power cable. Make sure the power cable cannot get caught in any way and is not a trip hazard.
6. Do not wind the power cable around the appliance and do not bend it. From time to time check if the power cable is damaged. If the appliance power cable is damaged please do not use and contact your place of purchase.



Caution! Danger of electric shock!

Appliance power cable and plug should never come into contact with water or any other liquids.

- Never immerse the appliance, the power cable or the plug in water or any other liquid for any reason whatsoever.
- Never use the appliance near a sink, or bathtub.
- Never touch the appliance with wet hands or standing on wet ground.
- Never place the appliance on wet surfaces.
- Never use the appliance outdoors. The appliance is not suited for outside use.

Additional protection may be obtained by fitting a residual current device that must not exceed 30 mA (IF < 30mA) into your home installation. Please consult a qualified electrician.



Plugging

Before first use ensure that your mains voltage corresponds to that stated on the rating plate of the appliance. Connect this appliance to a plug which is wired according to UK regulations.

- Run the cable in a way that nobody can trip over it or pull on it to avoid accidents.
- Take care that the cable never comes into contact with sharp edges and hot objects.



Attention! If this throw is used on an adjustable bed, check that the throw and cord do not become trapped or rucked, for example in hinges.



- The throw must never be used folded or crumpled.
- Do not pull on the power cable, twist or bend it sharply.



- Do not pierce the throw with needles!
- Only use original accessories.



- Never leave the throw unattended during operation and always unplug after use.



- This throw must only be used for its intended purposes which is a heated throw.
- Never tuck in or fold any of the wired areas or the control unit.

BEFORE THE FIRST USE

- Remove all packaging parts before initial operation and dispose of in an environmentally friendly way.
- When the throw is used for the first time, like any new item, it may let off a slight odour but this will disappear after a short while.

Positioning the Throw

1. Position the heated throw evenly ensuring it is lying flat where possible.
2. Do not tuck in any of the wired areas of the control or the control unit, make sure they are not in contact with any sharp surfaces, they are easy accessible and not a trip hazard.

OPERATION

With the heated throw you can gently warm and relax your whole body. The heating throw features a unique temperature control that regulates precisely the warmth-supply according to the chosen heat setting. The easy-care material and the detachable operating control unit or controls make the throw machine washable up to 30°C.

Temperature

Plug the product into a mains power socket that corresponds to the voltage shown on the rating label. Push the slide control to the "ON" position. Select the desired heat setting 1-9 or "0" for "OFF", it is recommended to use setting 7-9 for quick heat up then select a lower setting. To switch the throw off completely simply push the slide control to the "0" position. Heat up time may vary depending on room temperature.

Timer

The control unit of the heated throw has a timer button with setting 1-9 hours and "H" for 12 hours. Press the "Timer" button to control how long you want the throw to be left on. It is recommended if you intend to use the throw for up to 9 hours or "H" for 12 hours to have the heat setting on 1-6.

Overheat Protection

All heated throws are fitted with our overheat safeguard system. This offers protections against overheating or damage to the element by disengaging the power to the heating element before any overheat hazards occur.

CLEANING AND MAINTENANCE

NEVER DRY CLEAN

Before washing the heated throw, unplug it from the mains power socket and let it completely cool down. Unplug the control units from the heated throw. The heated throw may be washed by machine according to the instructions on the label at 30 degrees celsius. Always ensure the controls are detached from the throw before washing and NEVER immerse the control units in water.

To best dry the heated throw, hang on a clothes line to dry naturally without using securing pegs, never dry in a dryer and never iron. When the heated throw is completely dry, it should be reconnected to the control switch unit in the correct manner. The heated throw must only be operated with the control unit provided. When storing the heating throw, allow it to cool down before folding. Store the heating throw in a clean and dry place. When storing, do not place any objects on the heated throw to prevent buckling and damage to the internal wiring.

Technical Data

Power supply: 220 - 240 V~ 50 Hz

Heat output: 100W

Time settings: 1-9 hours & "H" for 12 hours

Heat levels: 1-9 hours & "0" for 12 continuous

Control unit model no.: 034

Control unit wattage: 100W

Dimensions: approx. 120 x 160cm

Material: 100% Polyester

Environmental Responsibilities



Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge.

SERVICE WARRANTY

Hygiene Supplies Direct guarantees the product free from defects in materials and workmanship for a period of 1 year from date of purchase.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on **0800 091 3171** or email **sales@hygienesuppliesdirect.com**

Hygiene Supplies Direct Ltd. Castleford, UK, WF10 1PA declares that the Sherpa Fleece Heated Throw is exclusively manufactured and imported for GlamHaus.